
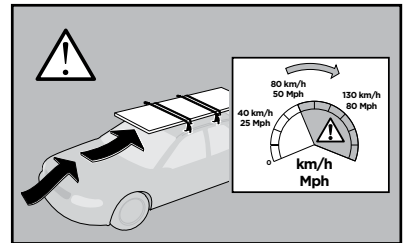
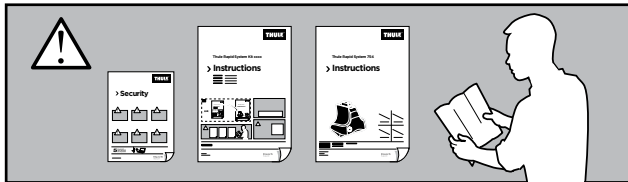
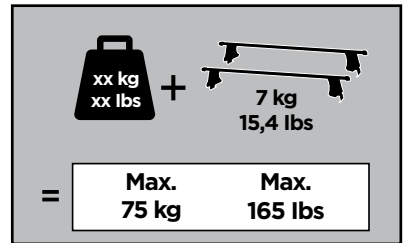


# Thule Rapid System Kit 1149

# > Instructions

HOLDEN Commodore V.T, 4-dr Sedan, 97-05

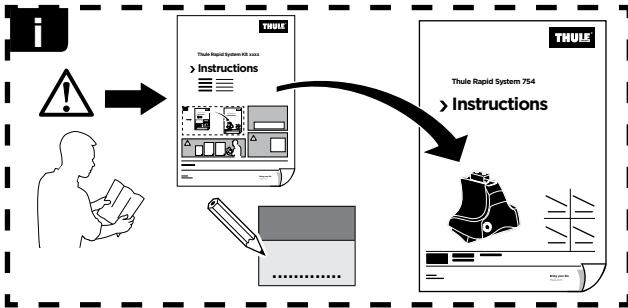

ISO 11154-E


141149

C.20121018  
519-1149-01

Bring your life  
thule.com



04 x4



075 x4





x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>HOLDEN Commodore VT, 4-dr Sedan, 97-05</b>	<b>41</b>	<b>1061</b>	<b>41 <sup>3</sup>/<sub>4</sub></b>

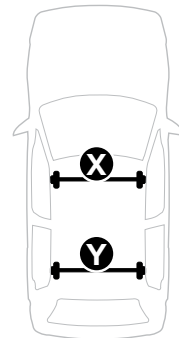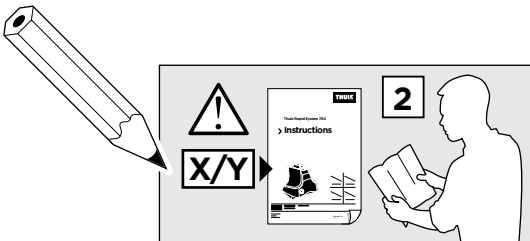


	Y (scale)	Y (mm)	Y (inch)
<b>HOLDEN Commodore VT, 4-dr Sedan, 97-05</b>	<b>41,5</b>	<b>1066</b>	<b>42</b>

**2**

**HOLDEN Commodore V.T, 4-dr Sedan, 97-05**

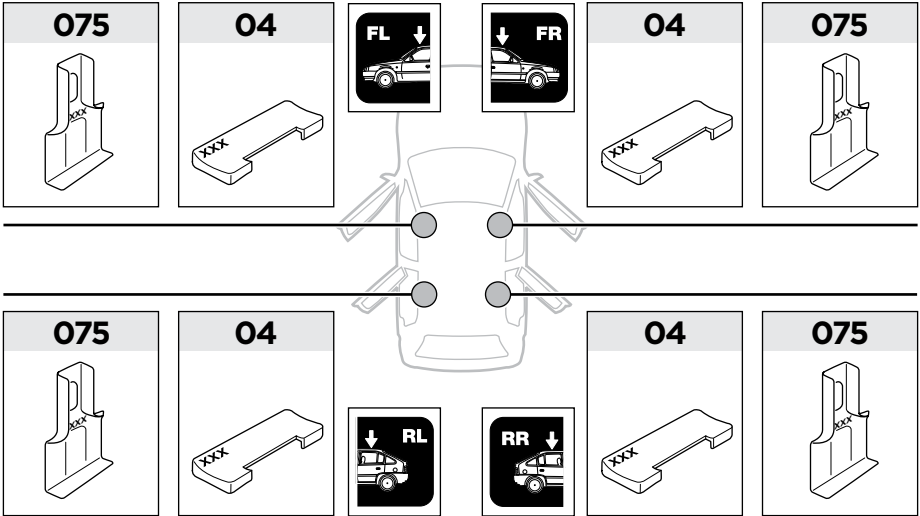

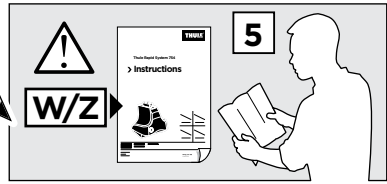**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HOLDEN Commodore V.T, 4-dr Sedan, 97-05</b>	<b>270</b>	<b>710</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>28</b>

