
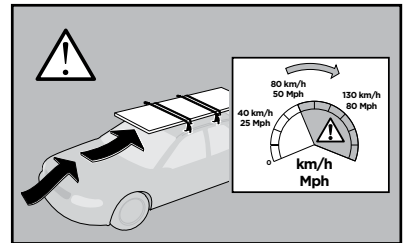
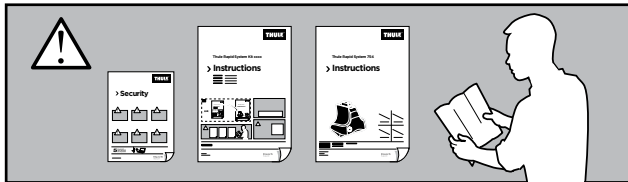
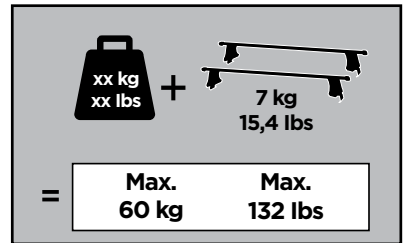


Thule Rapid System Kit 1328

> Instructions

VW Touran, 5-dr MPV, 03-

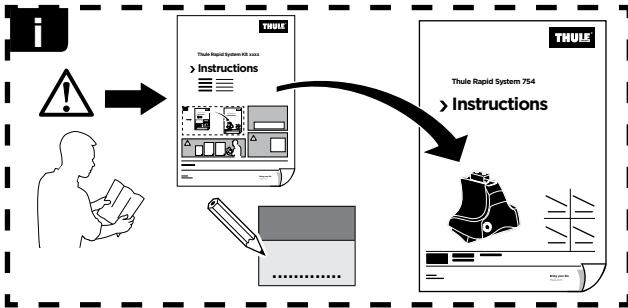

ISO 11154-E

141328


C.20121010
519-1328-01

Bring your life

thule.com



07 x2




571 x2



x1

65 x2






572 x2



x1

1


	X (scale)	X (mm)	X (inch)
VW Touran, 5-dr MPV, 03-	46	1111	43 ³ / ₄

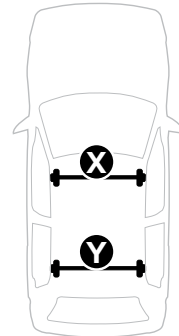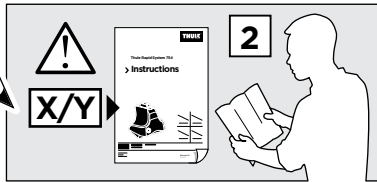
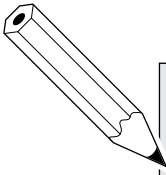


	Y (scale)	Y (mm)	Y (inch)
VW Touran, 5-dr MPV, 03-	42,5	1076	42 ³ / ₈

2

VW Touran, 5-dr MPV, 03-

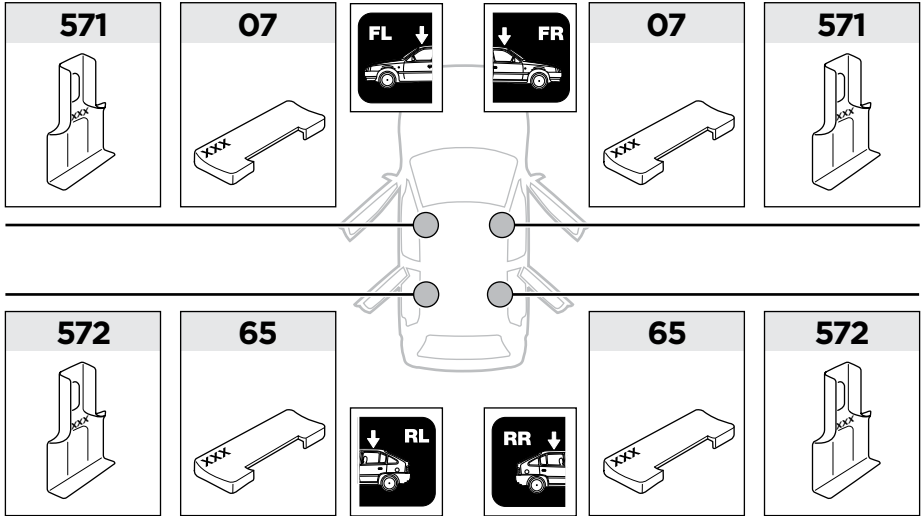

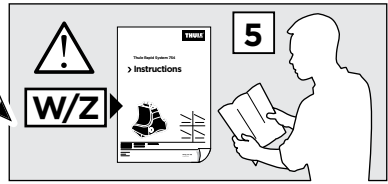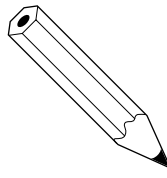3

	W (mm)	Z (mm)	W (inch)	Z (inch)
VW Touran, 5-dr MPV, 03-	400	770	15 ³/₄	30 ³/₈

